
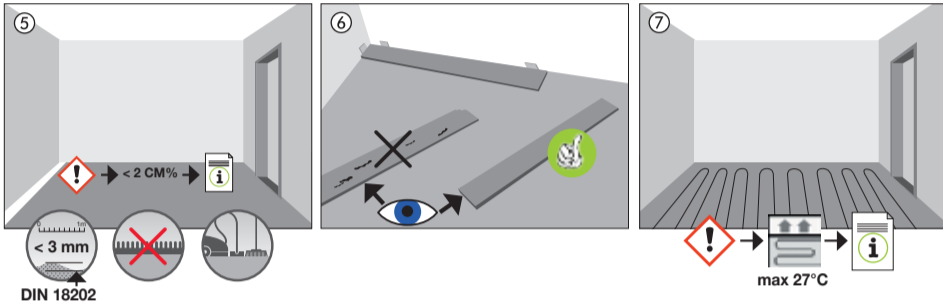


MINERAL^{PLUS}[®]

Designboden

Verlegeanleitung / Laying guide / Инструкция по укладке

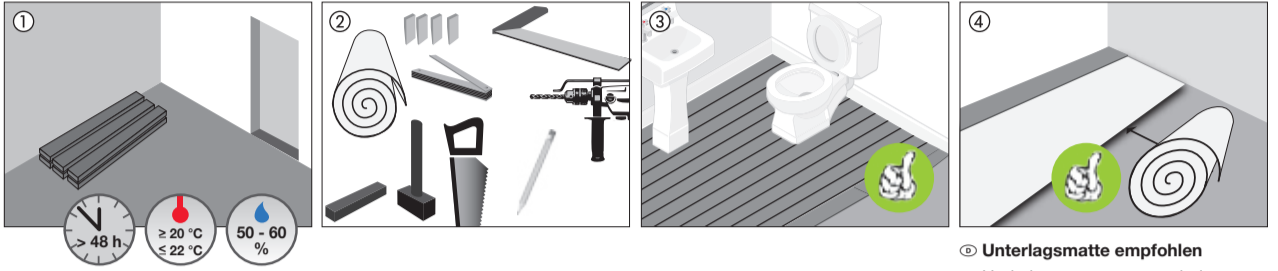

- Ⓢ Unterlagsmatte empfohlen
- Ⓢ Underlay mat recommended
- Ⓢ Odporúčame použiť podkladovú rohož
- Ⓢ Sous-couche recommandée
- Ⓢ Priporočena uporaba podloge
- Ⓢ Si consiglia il sottopavimento
- Ⓢ Doporučuje se použit podložku
- Ⓢ Alátétszónyeg használata javasolt
- Ⓢ Рекомендуется использование специальной подложки

